

WALKWAY WITH SELF-LATCHING 9600



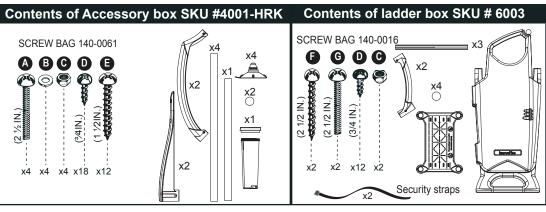

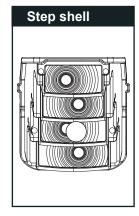



MAXIMUM functional width is 1/4".

WARNING

- Install the step on a flat surface.
- ▶ Do not jump or dive from the step or ladder.
- ▶ Remove the step from water when temperatures drop below freezing.
- ▶ In winter, the step should be stored in an area protected from snow.
- Never lift the step by its handrails.
- ▶ Use BATTERY operated tools to avoid electric shock near water.
- ▶ Ensure no corrosive materials are added to the step or harware kit.
- ▶ The step must be installed per manufacturer's instructions.
- ► File off all stripped or sharp edges before assembly to avoid injuries and liner damage.
- ► The manufacturer is not responsible for damages or injuries caused by improper installation or use of product.
- ► To ease the installation of handrails and bolts, use a screwdriver to line up the holes.
- Maximum weight: 300 lbs / 136 kg.



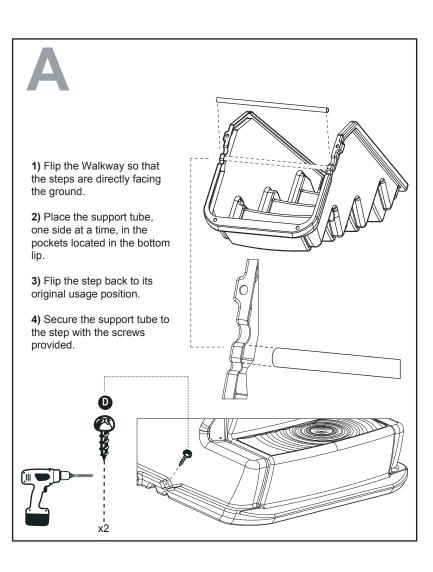

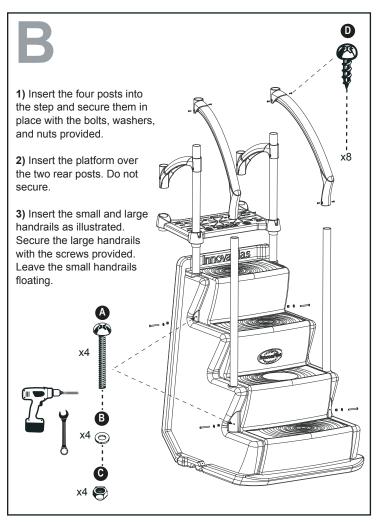



2257 route 139 Drummondville, Québec J2A 2G2

WWW.INNOVAPLAS.COM

MANUFACTURER WARRANTY


1 year on step and closure. 1 year on hardware.

REV. 10/08/2020

PN:

PG:1


WALKWAY WITH SELF-LATCHING 9600

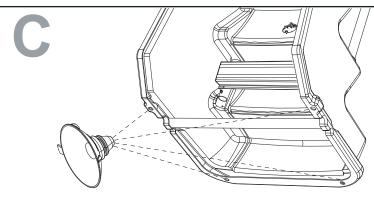

1) Insert the four Step Cups into the holes under the step.*



C1) Insert half of the Step Cup mushroom ring in the hole, at a 45 degree angle.





C3) Twist the Step Cup to ensure that the mushroom ring has entirely cleared the wall thickness. If it has, the suction cup should rotate freely.




* View step cups installation tips on YouTube: https://www.youtube.com/watch?v=W5RH1VNxpu0

1) Fill the ballast with sand. The



CAUTION


Failing to install the Step Cup™ system will greatly reduce the steadiness of the step and will void the manufacturer warranty.

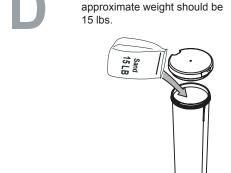


2) Screw the lid in place and align the cover ribs with the holes in the ballast base.



Fasten the cover to the ballast base with the four screws provided.

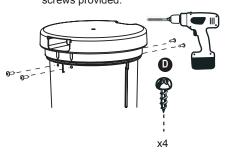

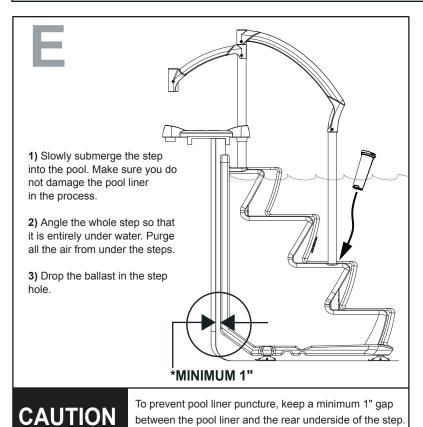

1) Once the step is in the pool secure the platform to the top seat (see illustration) using the two straps provided. Security strap х2 **OPTIONAL:** Once the pool step has been completely assembled and secured to the pool, attach the two screws supplied through the platform to the top seat of your pool to provided a more rigid assembly.



2257 route 139 Drummondville, Québec J2A 2G2

WWW.INNOVAPLAS.COM


MANUFACTURER WARRANTY


1 year on step and closure.
1 year on hardware.


REV. 10/08/2020

PN:

WALKWAY WITH SELF-LATCHING 9600

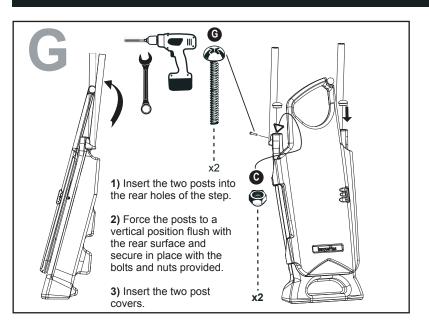

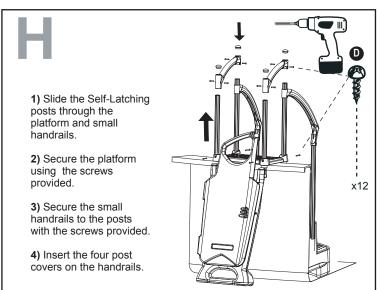

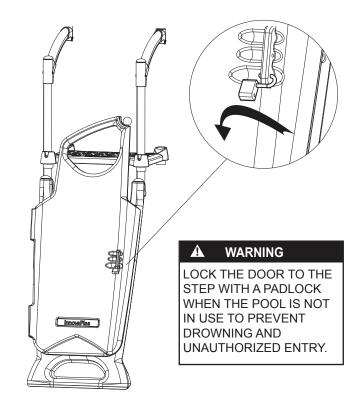



2257 route 139 Drummondville, Québec J2A 2G2